

FIG. 1

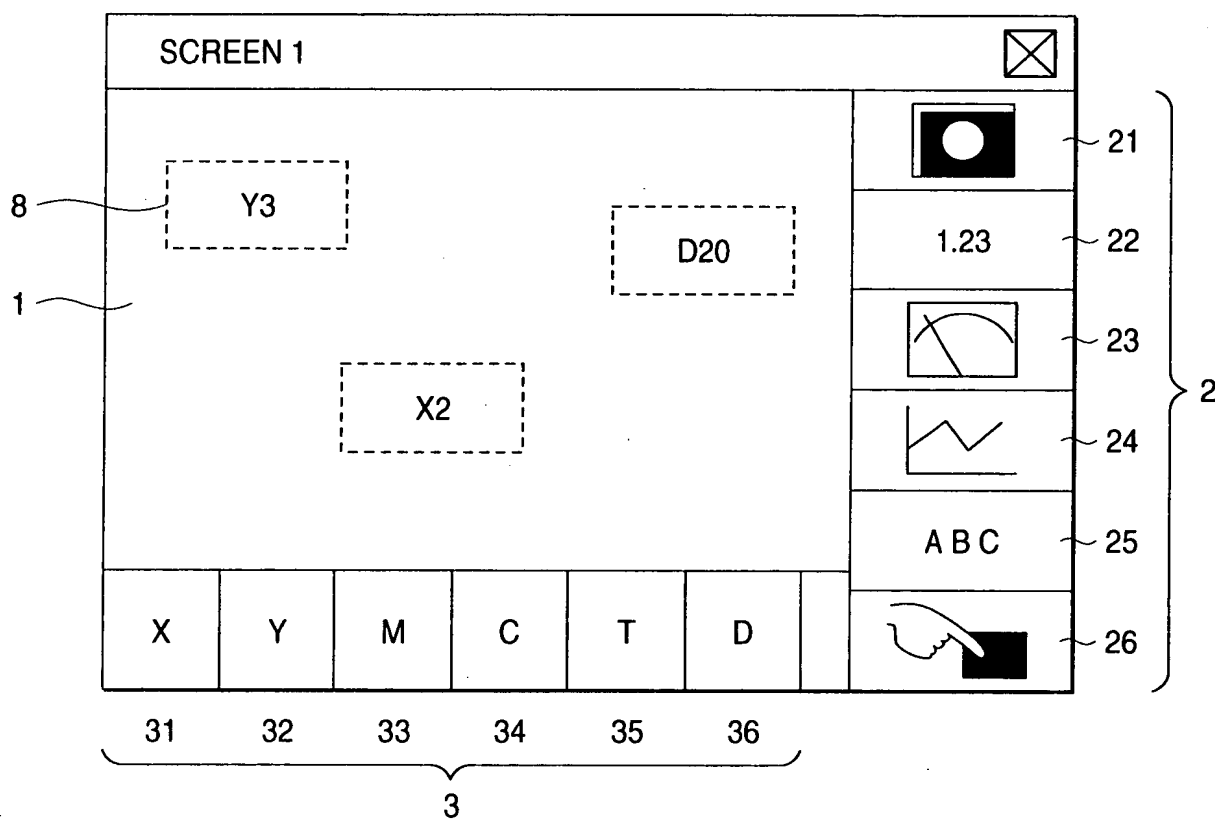


FIG. 2

Y

DEVICE NUMBER

4 3

OK 129

FIG. 3

DEVICE: Y3

5

1.23

ABC

DISPLAY MODE SELECTION

DISPLAY FUNCTION

SWITCH

MOMENTARY

ALTERNATE

SET

RESET

OK

6

7

FIG. 4

DISPLAY SCREEN

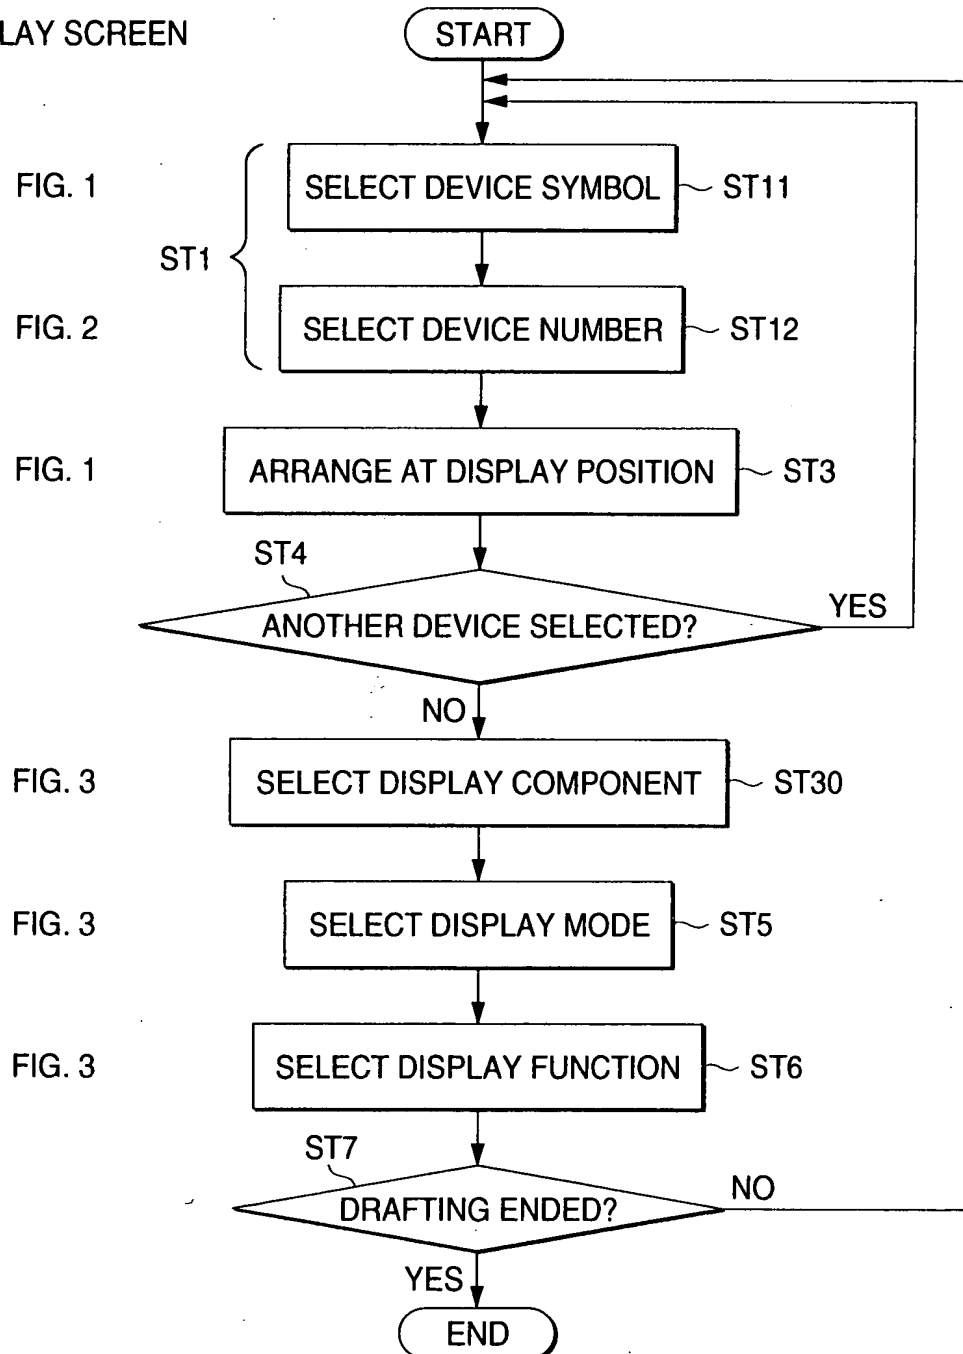


FIG. 5

4

DEVICE: Y

DEVICE NUMBER 3

5

1.23

ABC

6

DISPLAY MODE SELECTION

7

DISPLAY FUNCTION

SWITCH

☒ MOMENTARY

☐ ALTERNATE

☐ SET

☐ RESET

OK

FIG. 6

DISPLAY SCREEN

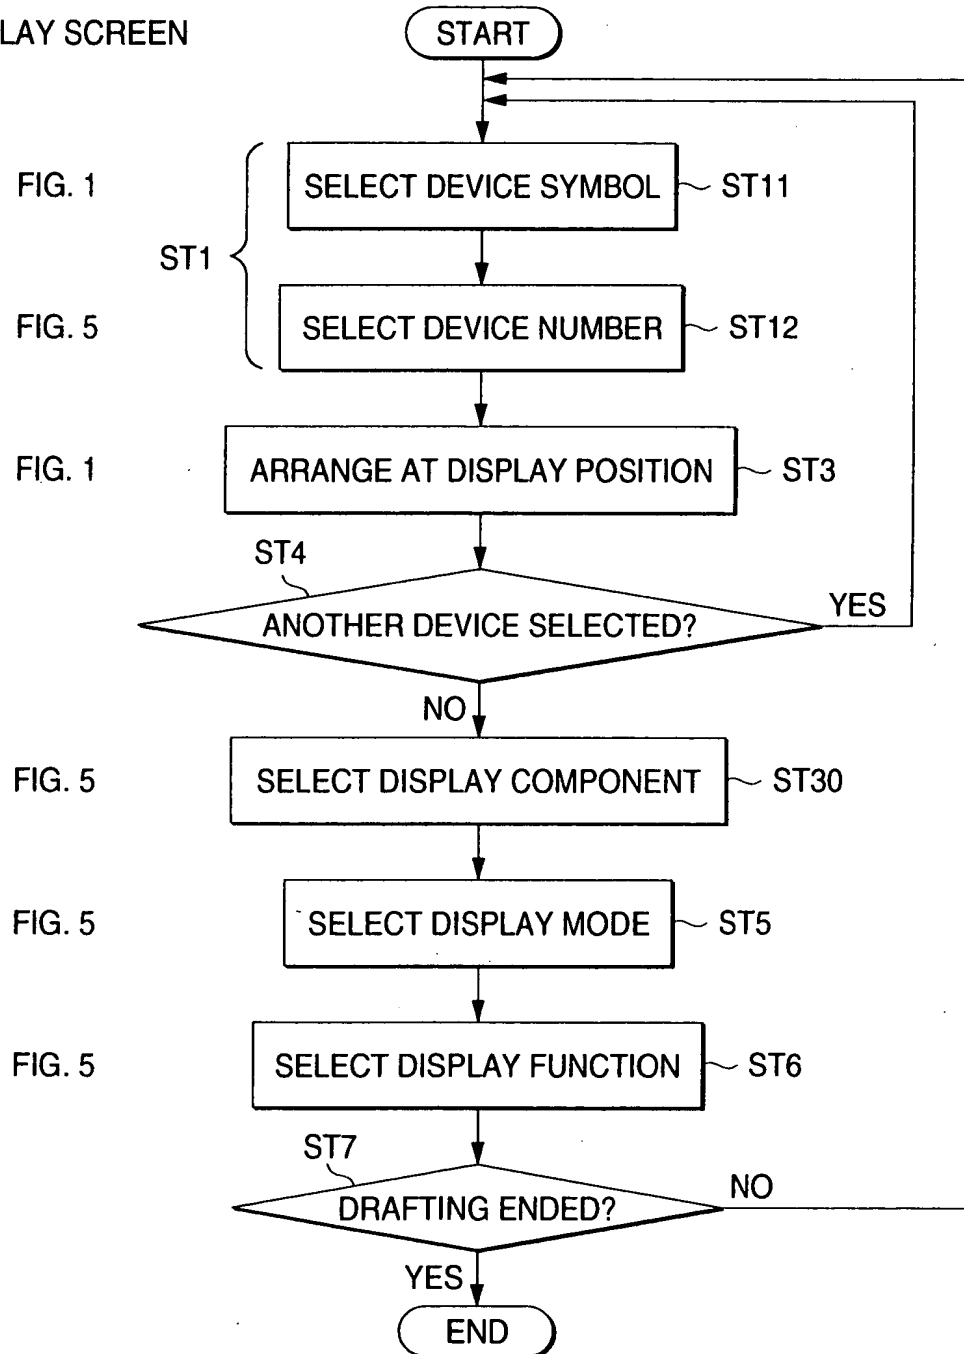


FIG. 7

DISPLAY SCREEN

FIG. 1

FIG. 5

FIG. 5

FIG. 5

FIG. 5

FIG. 1

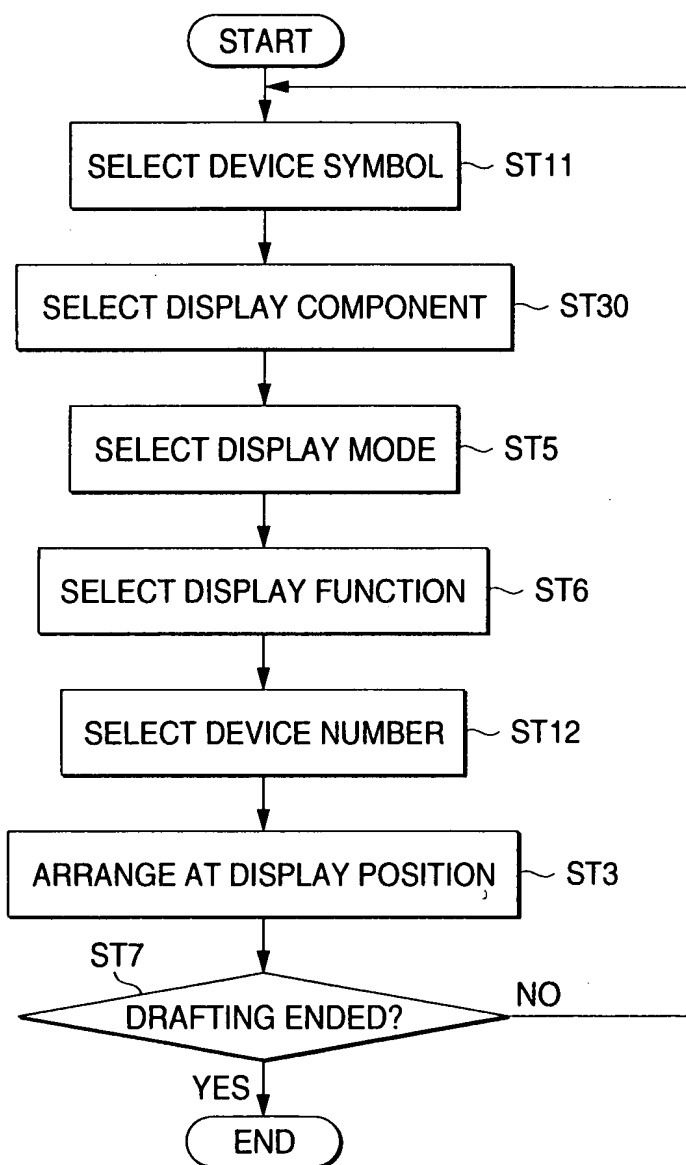


FIG. 8

DISPLAY SCREEN

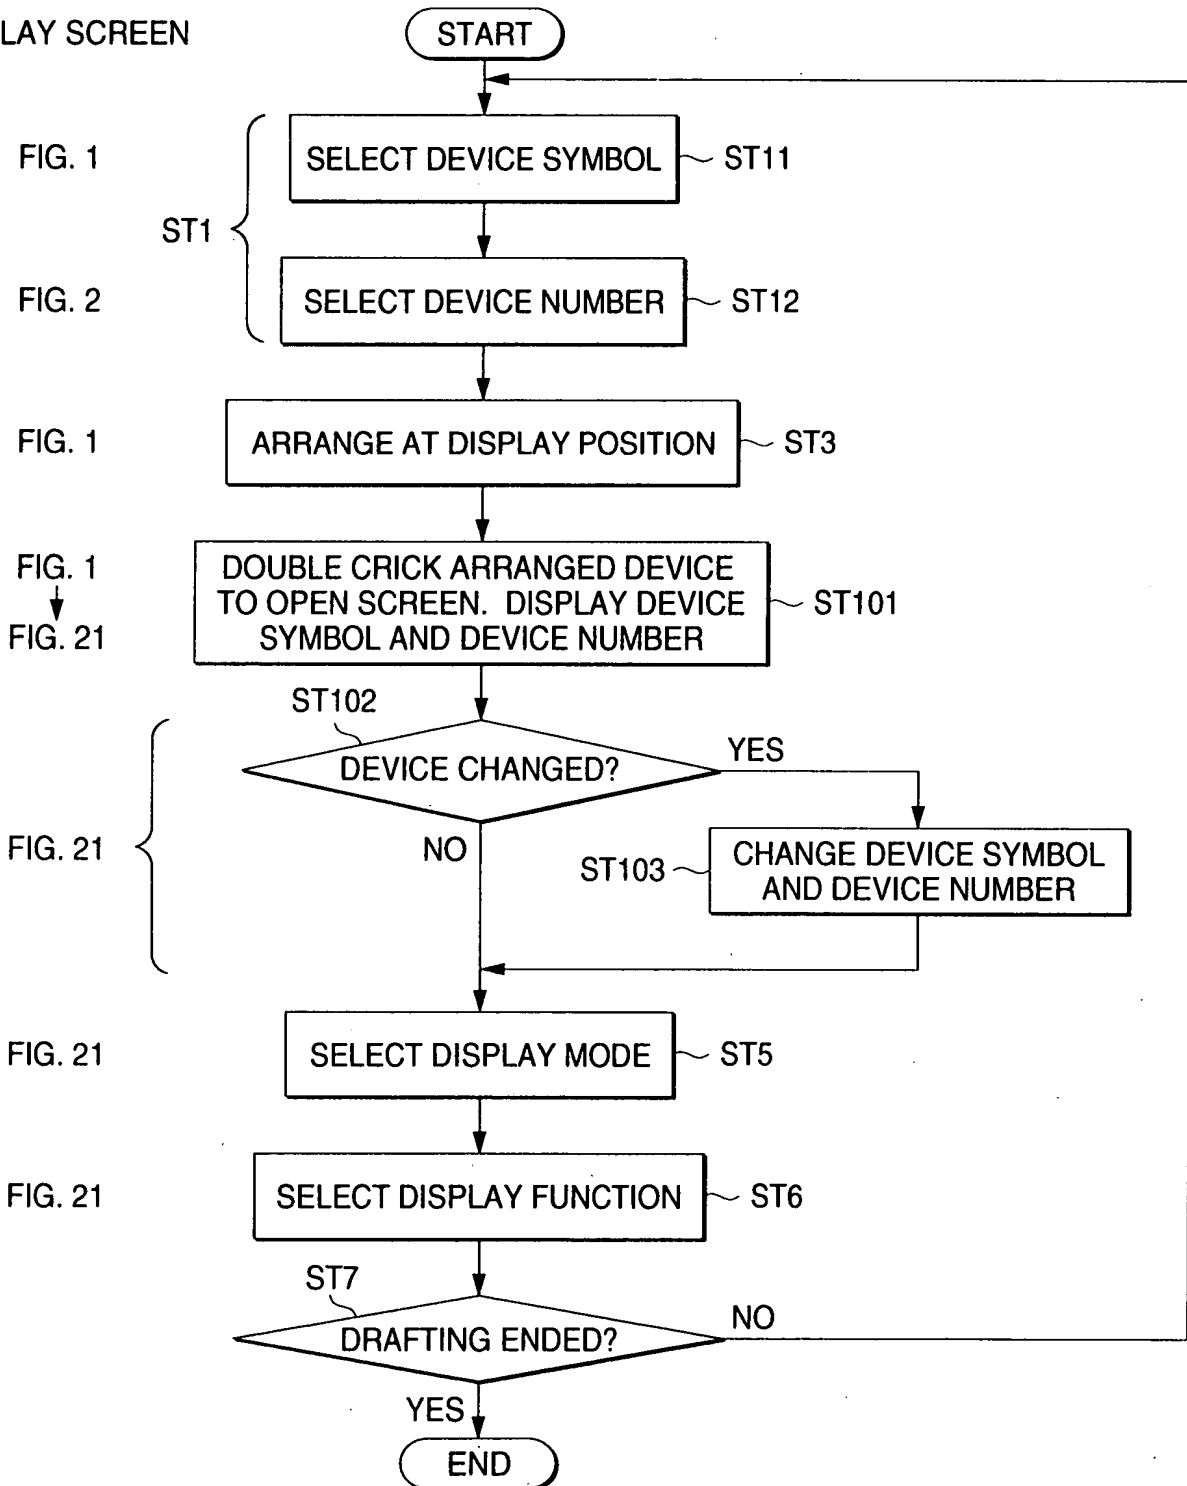


FIG. 9

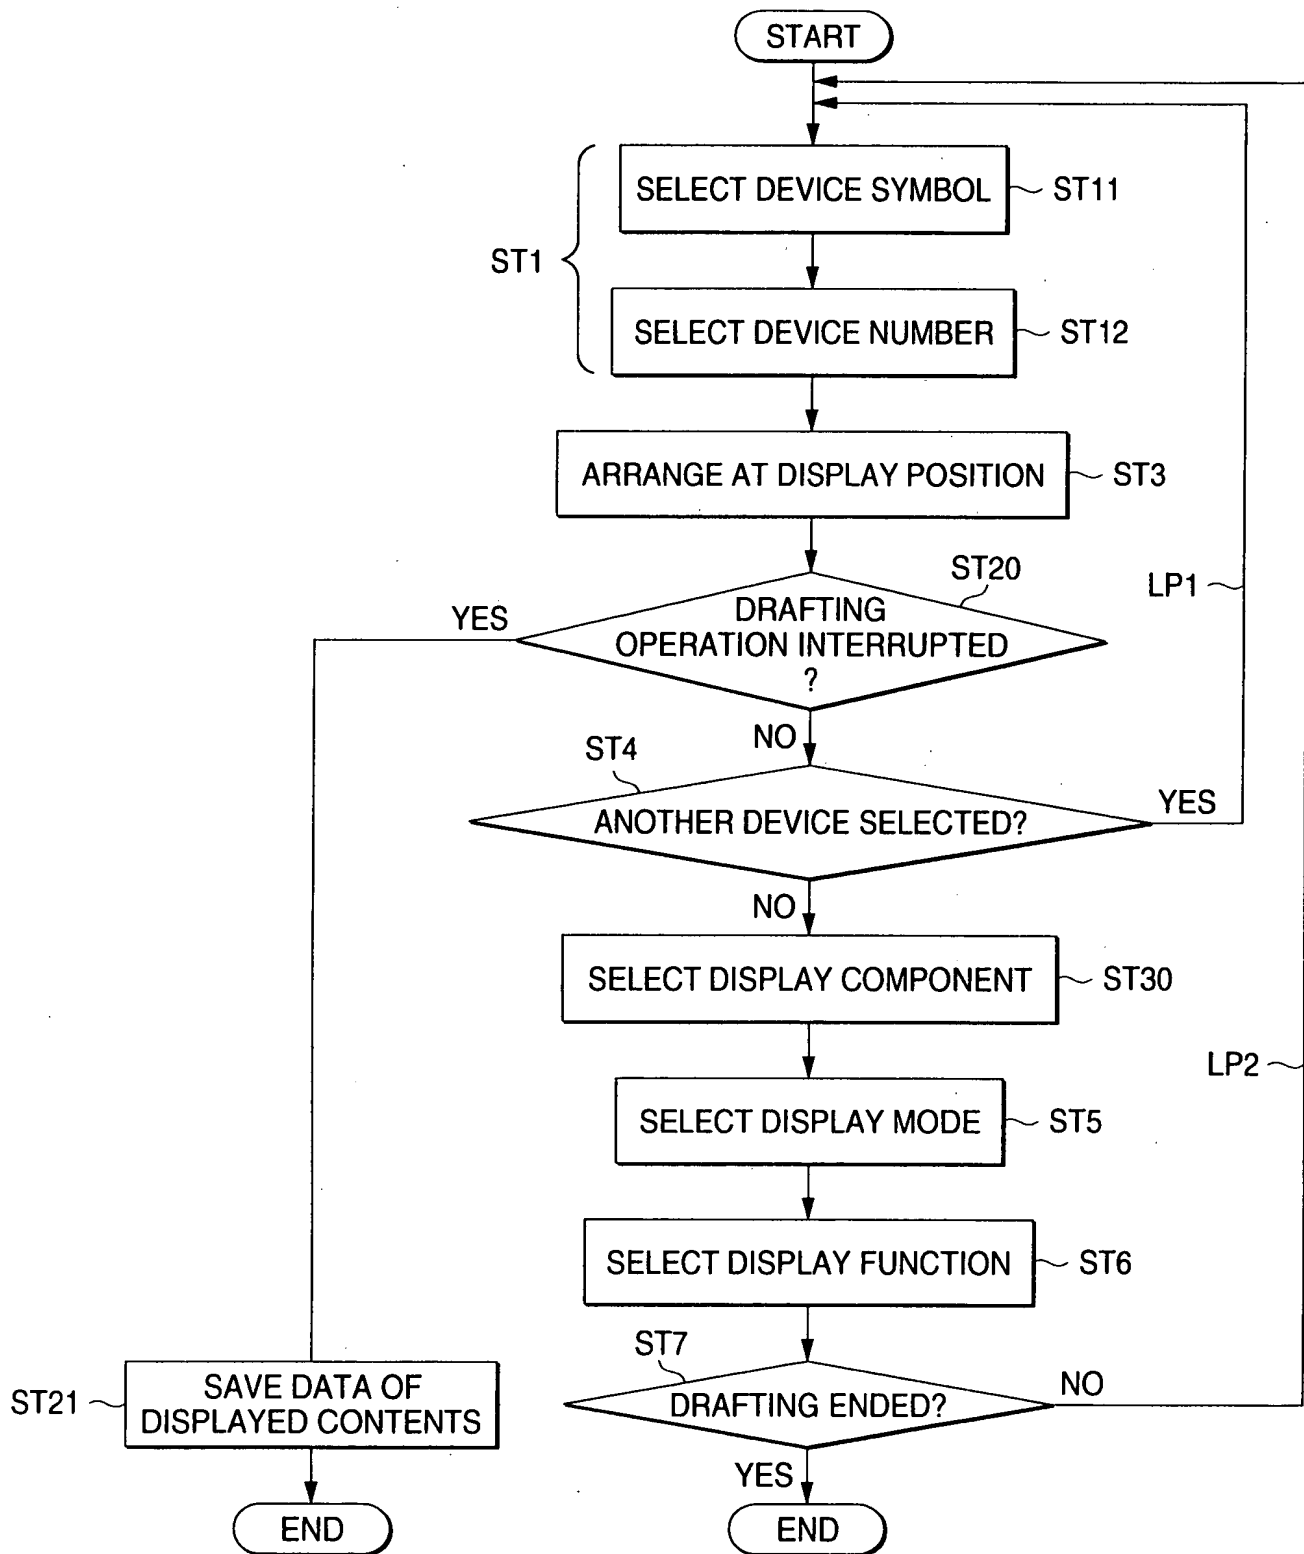




FIG. 10

DEVICE SYMBOL	→	Y	
DEVICE NUMBER	→	3	
DISPLAY POSITION X COORDINATE	→	1 2 3	
DISPLAY POSITION Y COORDINATE	→	2 3 4	
KIND OF DISPLAY COMPONENT	→	HUNG UP : FFFFh	~ 40: MEMORY
DISPLAY MODE	→	HUNG UP : FFFFh	~ 41: MEMORY
DISPLAY FUNCTION	→	HUNG UP : FFFFh	~ 42: MEMORY

FIG. 11

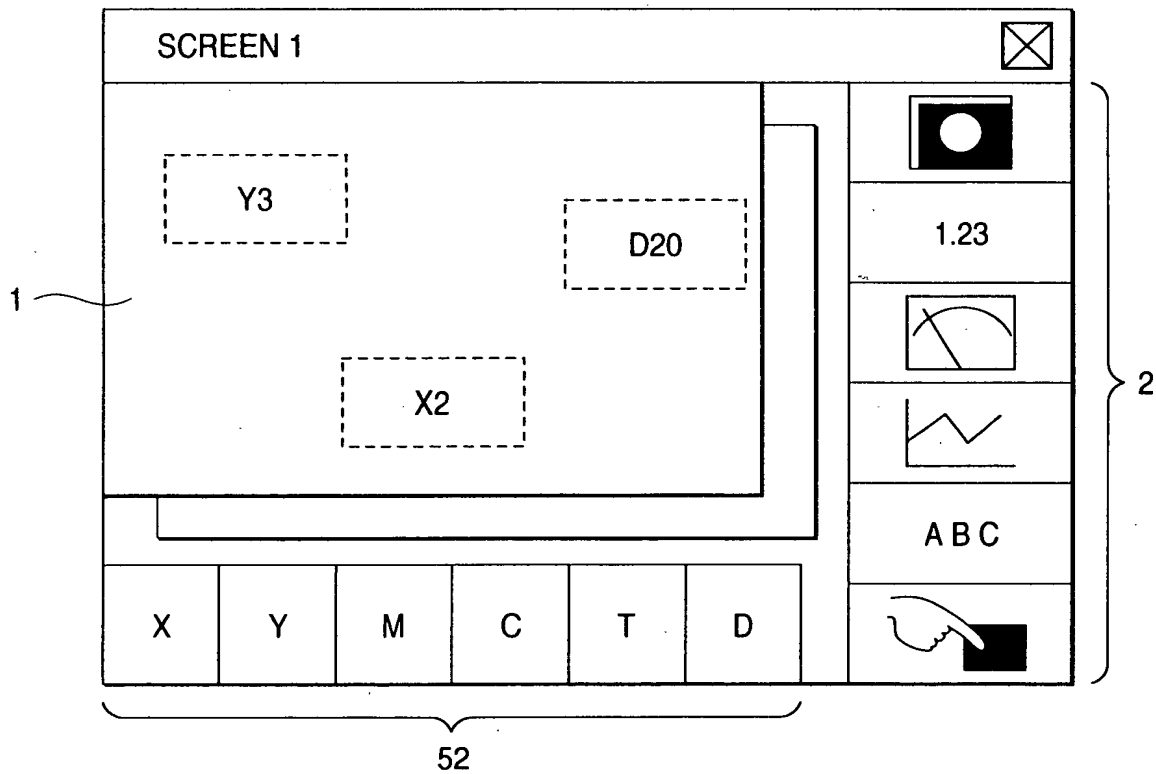


FIG. 12

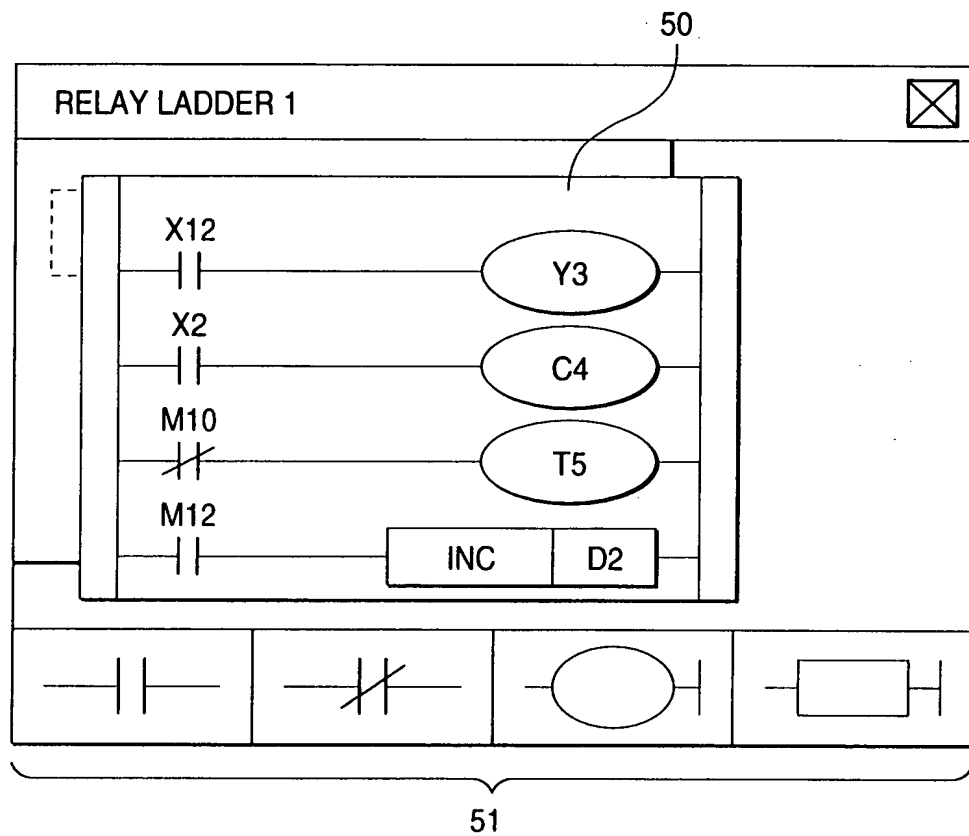


FIG. 13

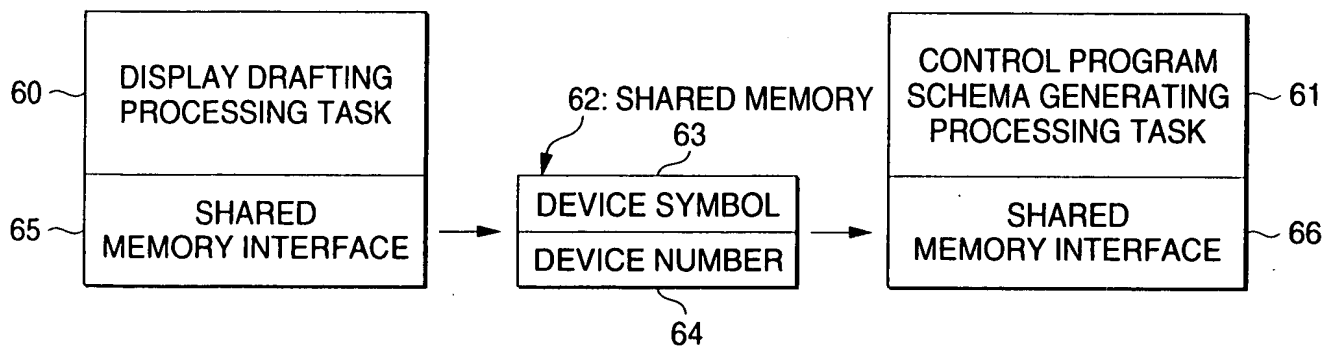


FIG. 14

Y

4

DEVICE NUMBER

3

▲▼

70

COMMENT

ELECTRIC MOTOR DRIVING

OK

FIG. 15

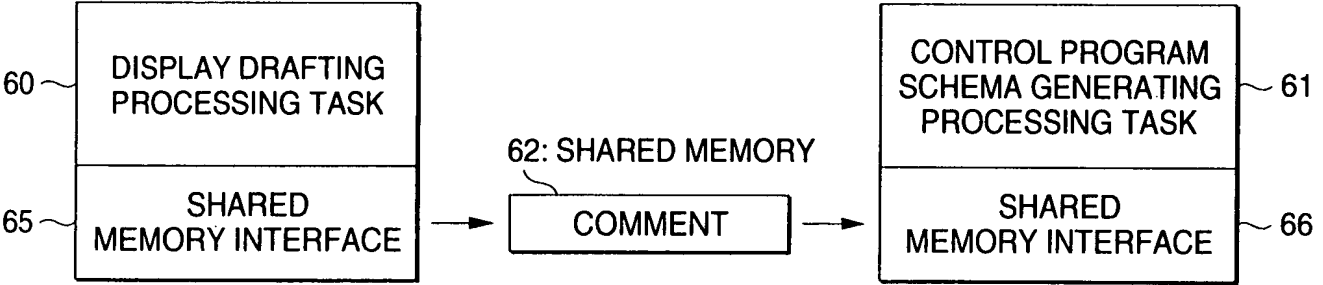


FIG. 16

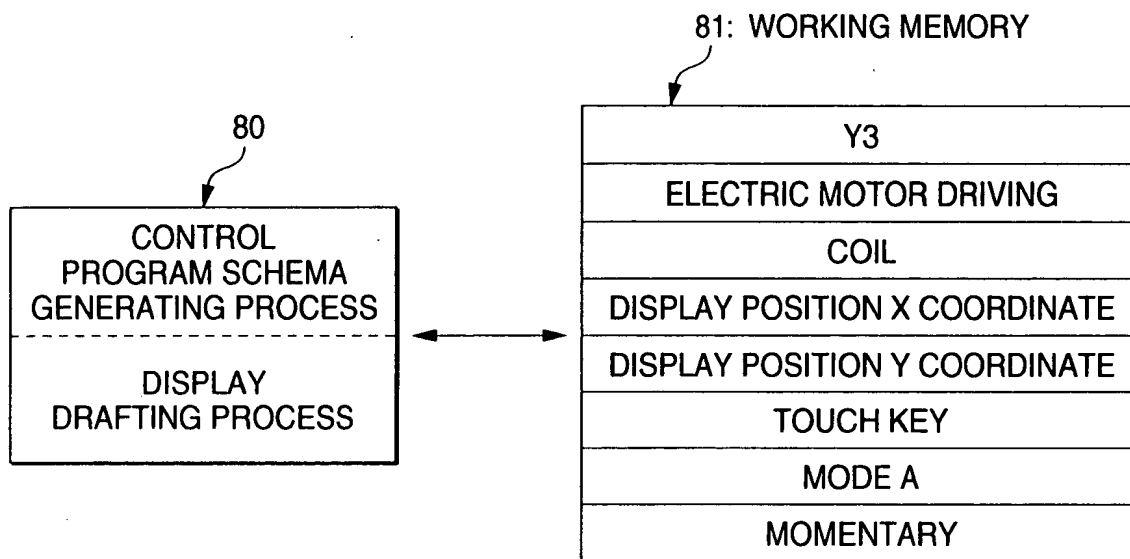


FIG. 17

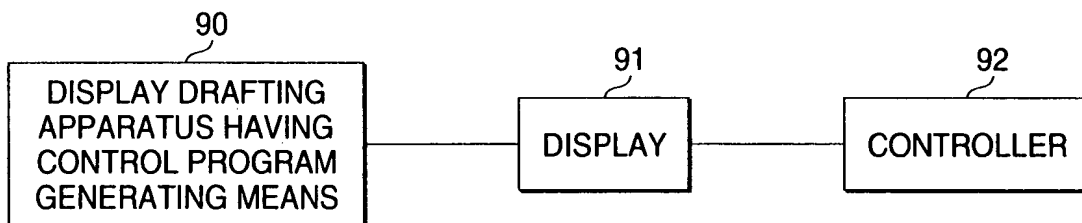


FIG. 18

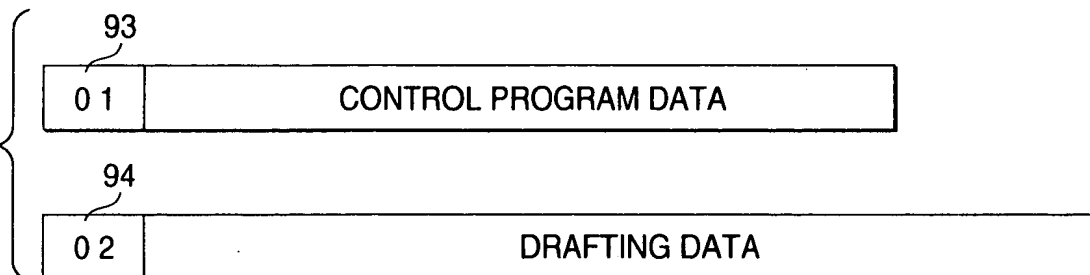


FIG. 19

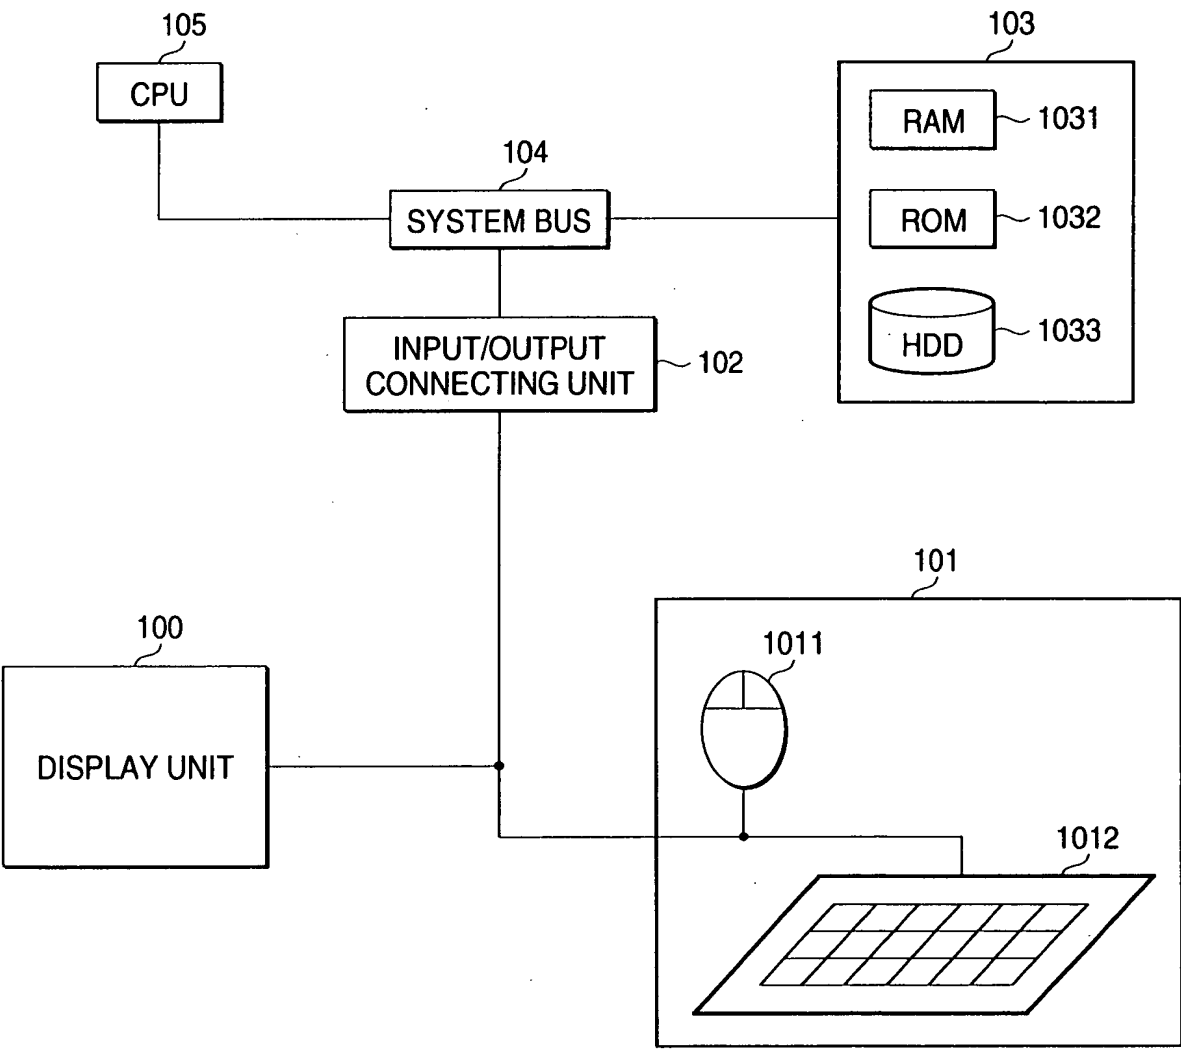


FIG. 20

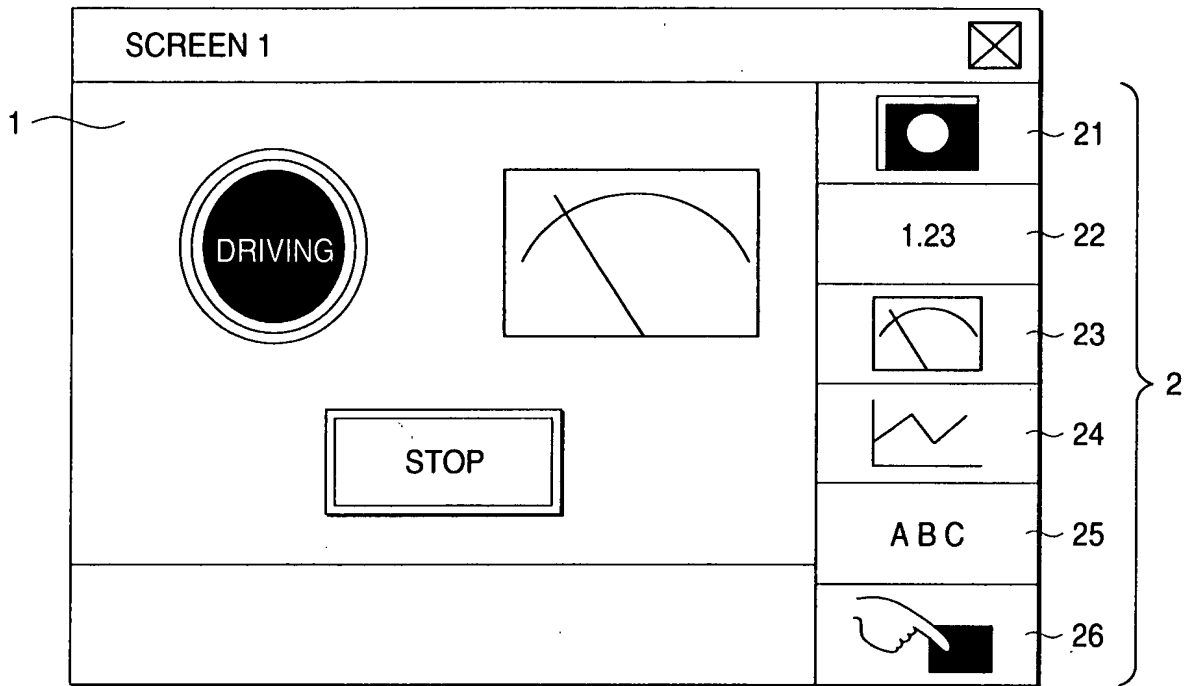


FIG. 21

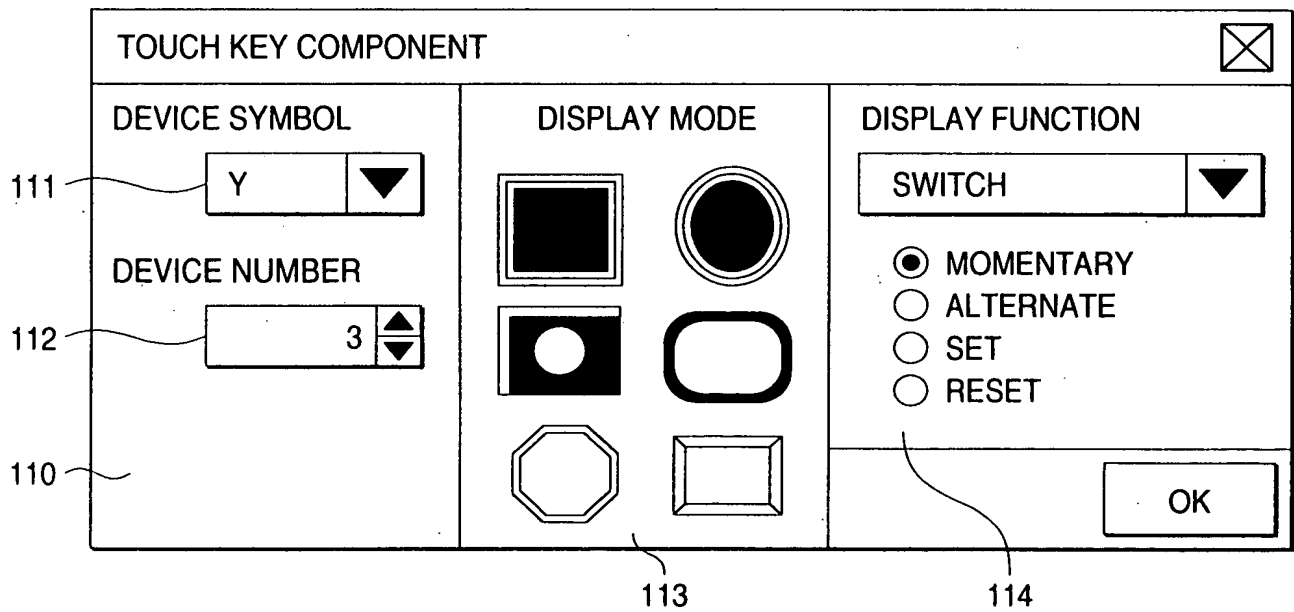


FIG. 22

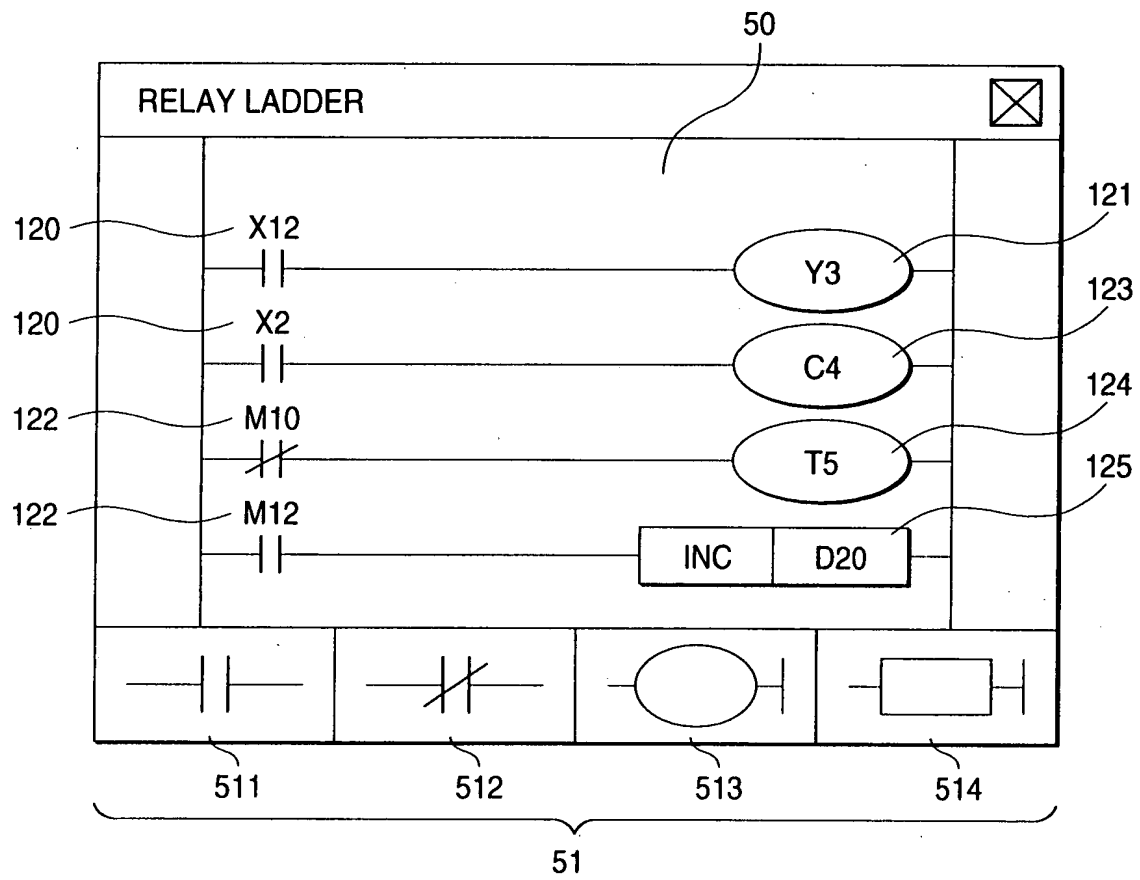


FIG. 23

The figure shows a graphical user interface window titled "A CONTACT". The window has a title bar with the text "A CONTACT" and a close button (a square with an 'X') in the top right corner. The main area of the window contains two input fields and an "OK" button. The first field is labeled "DEVICE SYMBOL" and contains a dropdown menu with the options "X", "Y", "M", "C", and "T". The second field is labeled "DEVICE NUMBER" and contains a text box with the value "12" and a spin button (a rectangle with up and down arrows). An "OK" button is located in the bottom right corner of the window. A line labeled "128" points to the "DEVICE NUMBER" field. A line labeled "129" points to the "OK" button. A line labeled "126" points to the main content area of the window. A line labeled "127" points to the "DEVICE SYMBOL" dropdown menu.

126

127

128

129

A CONTACT

DEVICE SYMBOL

DEVICE NUMBER

X

Y

M

C

T

12

OK



FIG. 24

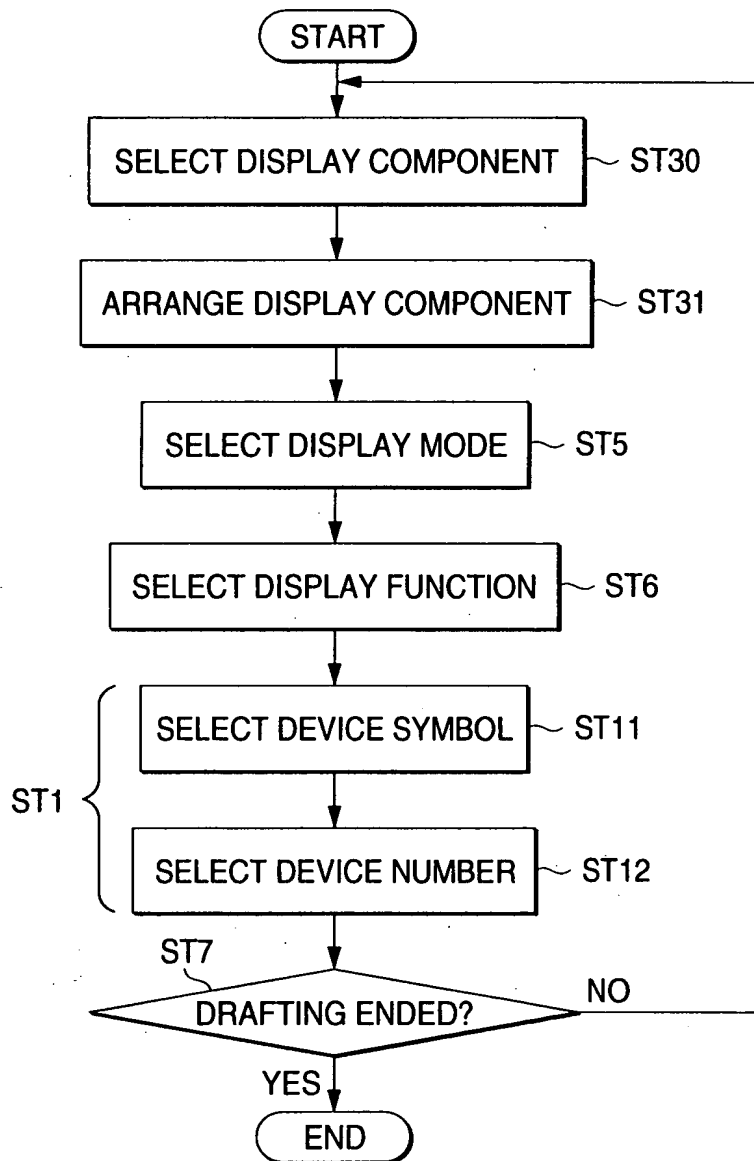


FIG. 25

